

INSTALLATION:

Rigid assembled mat usually requires screw fixing in exterior situations. Floor surfaces must be hard and level. If fixing is required, the infill can be lifted at an edge to allow a screw fix, after which the infill can be replaced. Optionally, velcro strips may be used to hold mat in position for easy removal for off-site cleaning & replacement.

optional heavy duty wide ramp for floors without matwell recess





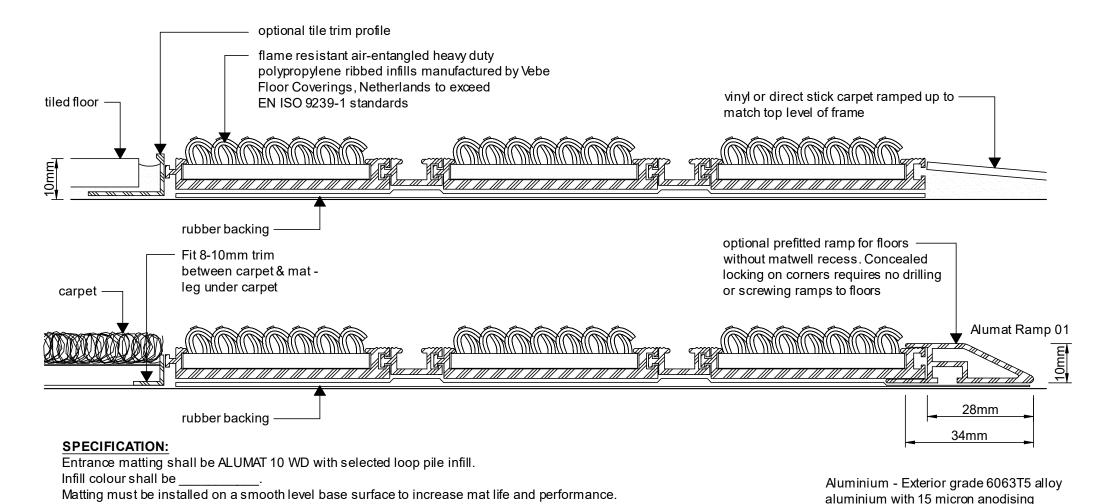

ALUMAT FLOORING SOLUTIONS Probett Developments Ltd. P.O. Box 89 018, Torbay, Auckland 0742

Ph.: 09 473-1602

E-mail: info@alumat.co.nz Web: www.alumat.co.nz

©2023 The copyright of this document is owned by Probett Developments Ltd

ALUMAT 10 WD

INSTALLATION DETAILS

Revision: 2 Scale: 1:1